

FORMAX[®]

FD 2000 / FD 2030
AutoSeal[®]


OPERATOR MANUAL
FIFTH EDITION

TABLE OF CONTENTS



DESCRIPTION	1
SPECIFICATIONS	1
UNPACKING AND SET-UP	1
CONTROLS	2
OPERATION	2
FOLD PLATE ADJUSTMENT	3
Setting Custom Folds	3
DAILY MAINTENANCE	4
TROUBLESHOOTING	5
DETERMINING FOLD TYPE	6
TEST SHEET	7
OPTIONAL CONVEYOR INSTALLATION	8

DESCRIPTION

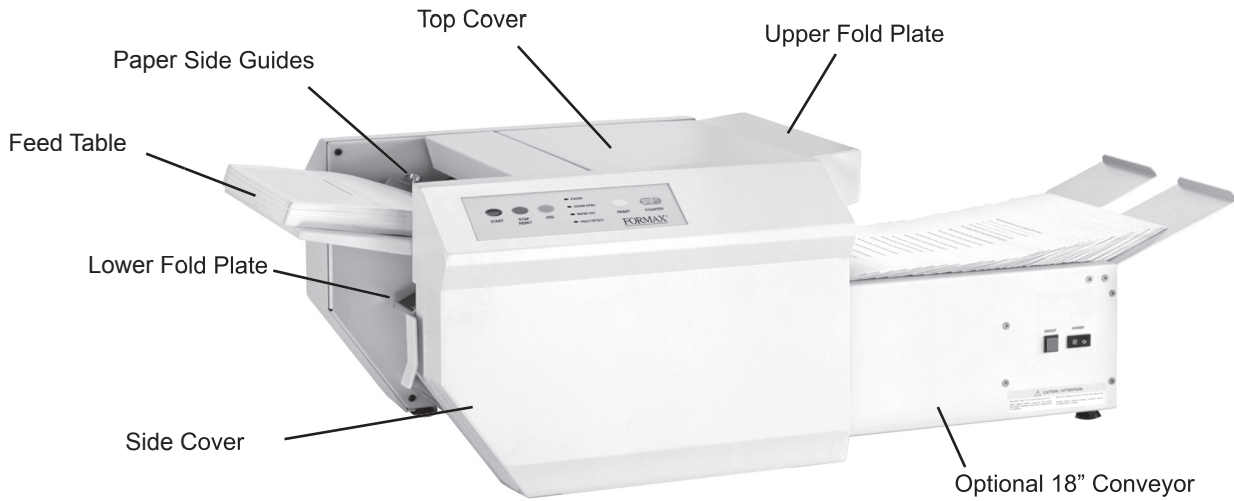

FUNCTION


The FD 2000/2030 folds and seals pressure sensitive forms with pre-applied glue lines into mail ready pieces. Numerous folds using several different paper sizes can be processed to meet your needs. For configurations and paper sizes see specifications.

SPECIFICATIONS

Maximum foldable paper size	14" length x 8.5" width
Fold styles	"C", "Z", "V" and custom folds
Paper loading capacity (2000/2030)	Up to 200/250 sheets of 24 # pre-glued forms
Speed (2000/2030)	Up to 7,000/9,000 per hour
Weight	90 lbs.
Power supply	FD Model: 120 volts, 60 Hz, 3.5 amps. FE Model: 240 volts, 50 Hz, 3.5 amps.


UNPACKING AND SETUP

1. Check package for shipping damage. If there is shipping damage do not discard the box.
2. CAUTION: Two people must lift the machine out of the box.
3. Remove the accessory bag which is between the machine and the catch tray.
4. Place the jam clearing handle into the the holder which is mounted to the machine. This is the jam clearing handle's proper location (figure 1).

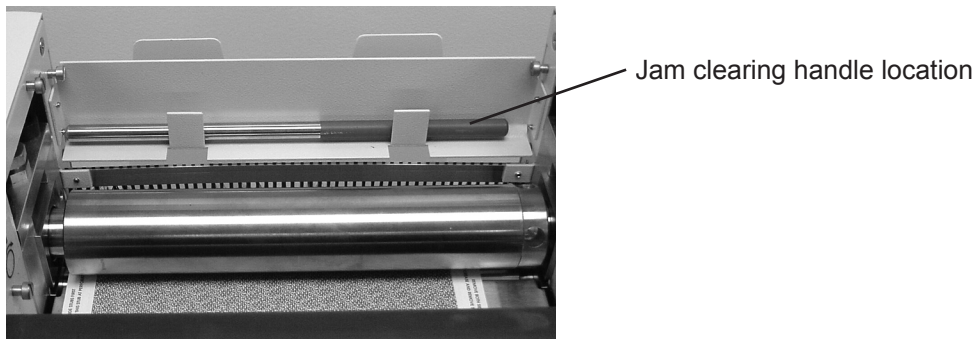

(Figure 1)

CONTROLS

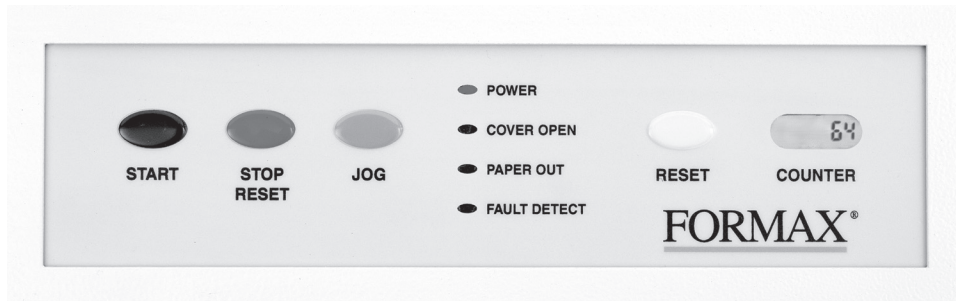


- Start Starts machine.
- Stop/ Reset..... Stops machine / clears “fault” condition.
- Jog..... Allows one piece of paper to feed at a time. Used for paper fold settings.
- Power..... Light comes on when power is on.
- Cover open..... Light comes on if either top cover or side cover is open.
- Paper out..... Light comes on when infeed paper tray is empty.
- Fault detect..... Light comes on if there is a paper jam.
- Reset..... Resets counter.
- Counter..... Shows forms count.

OPERATION

1. Adjust fold plates to desired fold for length of paper (see fold plate adjustment on page 3). To do this first loosen two thumbscrews (figure 1a) on each fold plate. Align center bar (figure 1b) so the marks on each side match up. For “V” folds remove the lower fold plate, turn around 180° and reinstall
2. Load neatly stacked and squared paper into the hopper. Paper can be stacked up to 200 for the FD 2000 and 250 for the FD 2030. Note: Standard “Z” fold forms can be loaded face up or down with the glue edge leading. All “C” fold forms must be loaded face up with glue edge leading.
3. Make sure covers are closed properly.
4. Plug in cord and turn power on.
5. Press jog switch to make sure folds are correct, adjust if necessary (see fold plate adjustment pg 3).
6. Press the start button to begin operation.

FOLD PLATE ADJUSTMENT

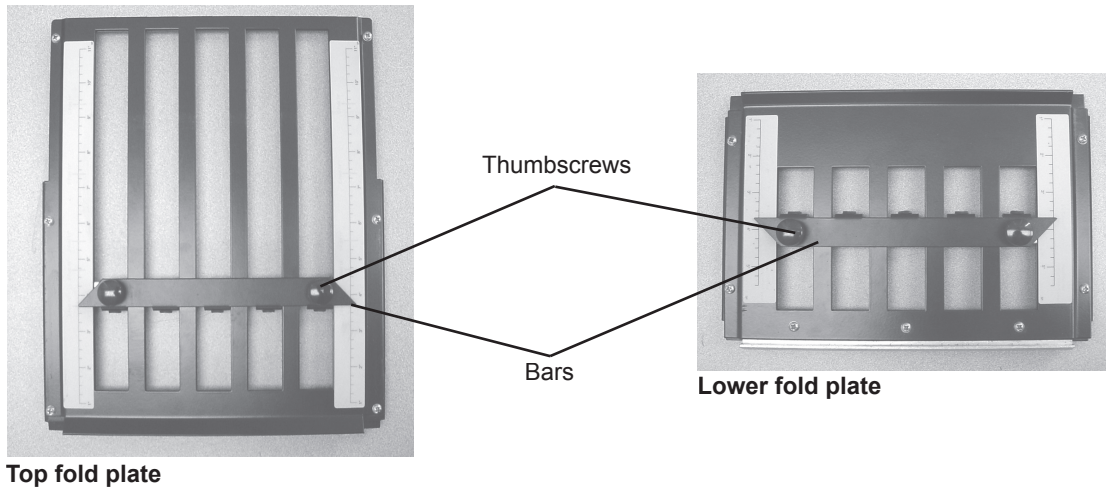

1. To adjust the first fold open the top cover to access the top fold plate. If the first fold is too long loosen the two thumbscrews and slide the bar down. If the fold is too short loosen the thumbscrews and slide the bar up.

NOTE: The bar should be on the same marks on each side.

2. To adjust the second fold remove the lower fold plate. If the second fold is too long loosen the two thumbscrews and slide the bar up. If the fold is too short loosen the thumbscrews and slide the bar down.


NOTE: The bar should be on the same marks on each side.

3. For quick setup of “C”, “Z” and “V” folds look for the blue lines on the fold plate.

Setting Custom Folds


Example 1: Uneven “Z”

1. Measure the length of panel “A”
2. Adjust the upper fold plate so that the bar lines up with the measurements of panel “A” i.e. if panel “A” is $5 \frac{1}{4}$ ” long move the bar up or down so that it lines up with the $5 \frac{1}{4}$ ” mark on the fold plate.
3. Measure the length of panel “B”
4. Adjust the lower fold plate so that the bar lines up with the measurements of panel “B”.
5. Load forms and press start (refer to OPERATION on page 2).

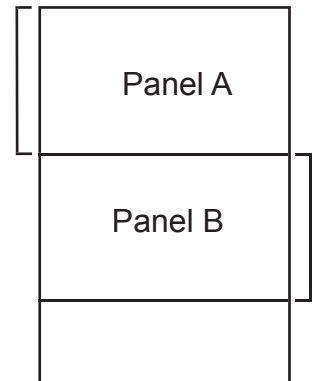

Example 2: Uneven “C”

1. Measure the length of panel “A” & “B”
2. Adjust the upper fold plate so that the bar lines up with the measurements of panel “A” & “B” i.e. if panel “A” & “B” are $10 \frac{1}{2}$ ” long move the bar up or down so that it lines up with the $10 \frac{1}{2}$ ” mark on the fold plate.
3. Measure the length of panel “B”
4. Adjust the lower fold plate so that the bar lines up with the measurements of panel “B”.
5. Load forms and press start (refer to OPERATION on page 2).

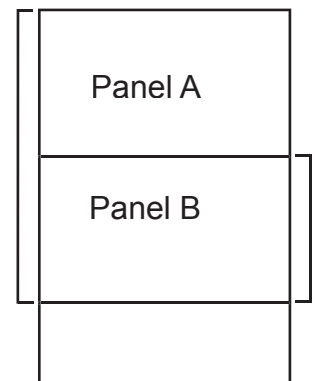

DAILY MAINTENANCE

1. It is recommended to let forms cool for one-half hour, from the laser printer, before folding and sealing. This allows toner to set on the forms, and static electricity to discharge. A 400 Series Jogger is recommended for best results. The Jogger squares the forms and dissipates heat and static created by laser printers.
2. If toner builds up on the metal sealer rollers clean the rollers with a lint-free cloth dampened sparingly with a mild household cleaner.
3. Clean in-feed wheels and fold rollers with Formax recommended roller cleaner & rejuvenator to remove paper dust and toner. A damp cloth with water is the best alternative. CAUTION: Do not use any chemicals other than the roller cleaner & rejuvenator or water.



TROUBLESHOOTING

A. Clearing Paper Jams and Fault Signals on the Display Panel:

WARNING: Turn off machine and unplug cord from its receptacle

1. If a jam occurs in a fold plate, unplug and remove the fold plate and remove paper. Reinstall fold plate and then press the reset button on the control panel to clear the fault signal.
2. If a jam occurs in between the metal sealing rollers, remove any remaining forms from the hopper. Open the top cover and remove the upper fold plate. Remove the jam-clearing tool (located under the top fold plate), apply the tool to the upper metal roller and turn clockwise until the paper jam is clear (**Caution:** Do not apply excessive force or rollers may be damaged) . Remove the jammed form and return tool in holder and reinstall the upper fold plate. Reinstall cover and press the reset button.

Note: Press the black button near the power cord inlet to reset the breaker if necessary.

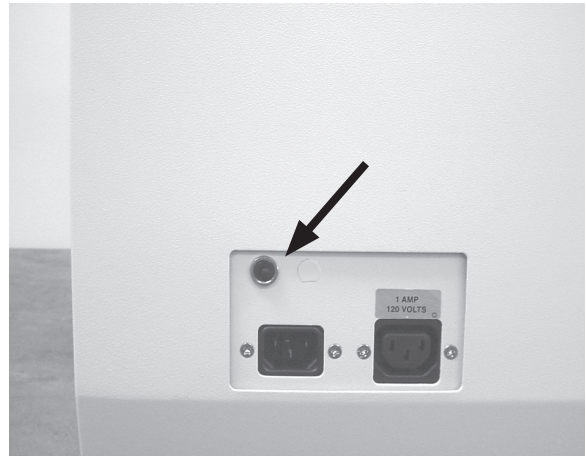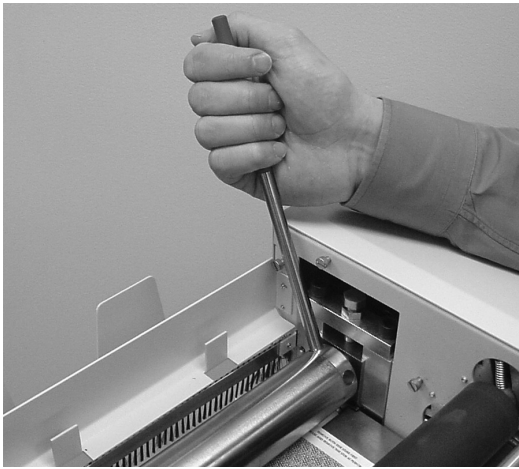

B. Paper Pulls Left or Right During Feeding:

1. Adjust the side guides to the edge of the forms.
2. Clean the 3 infeed wheels with a cloth dampened with a mild household cleaner.

C. Skewed Forms



1. If paper folds left or right adjust the skew adjuster. To adjust the skew, turn it left or right until the paper is feeding correctly and folds squarely.




2. Side guides should be adjusted so that the forms do not have free play between the guides.

DETERMINING FOLD TYPE

Two Standard Folds 11" "Z" & 11" "C"
Refer to Operator Manual for custom fold setup.

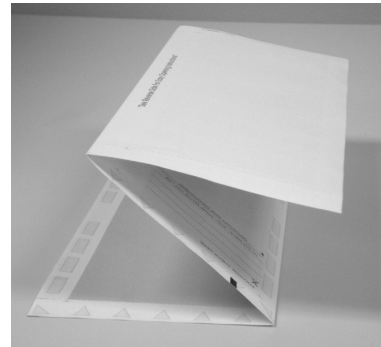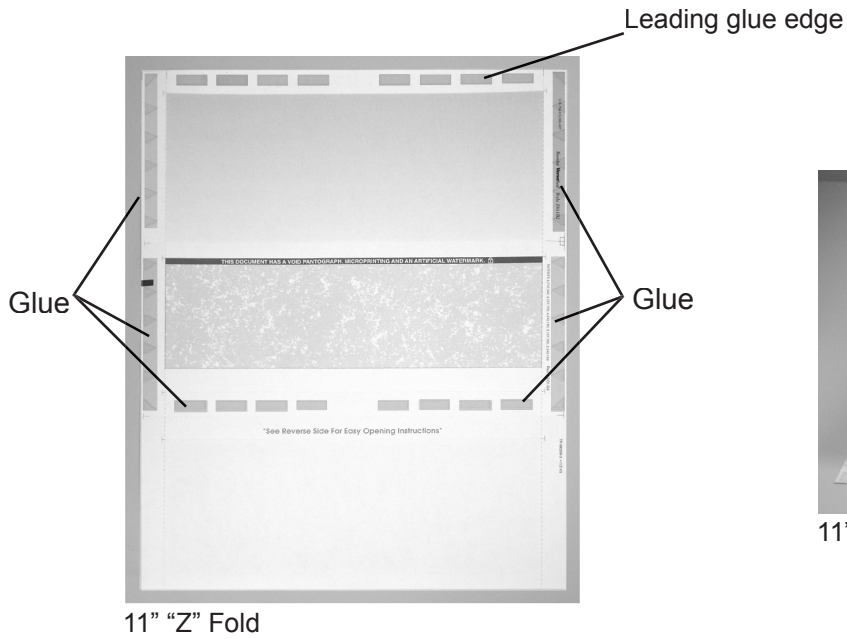

11" "Z" Fold

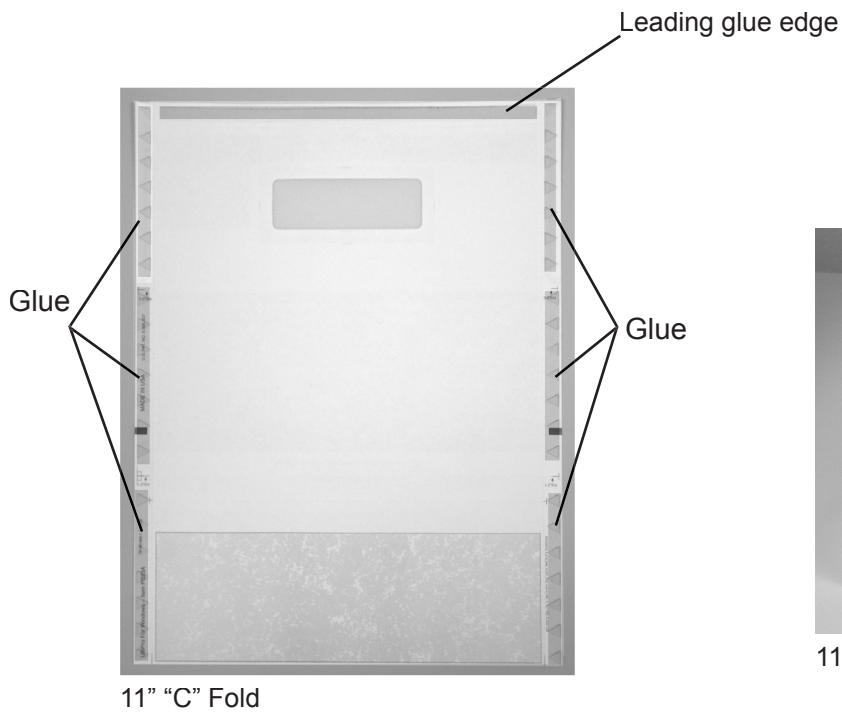

11" "C" Fold


Leading Edge



Make copies of this page on copy paper for fine tuning folds


Instruction For Lining Up Folds

1. Place a stack of these sheets into the feeder and fold one (1) or two (2) sheets.

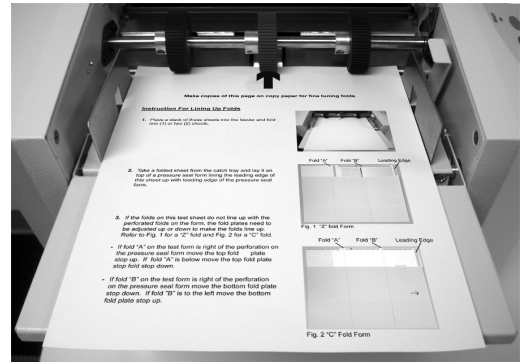

2. Take a folded sheet from the catch tray and lay it on top of a pressure seal form lining the leading edge of this sheet up with leading edge of the pressure seal form.

Fold "A" Fold "B" Leading Edge

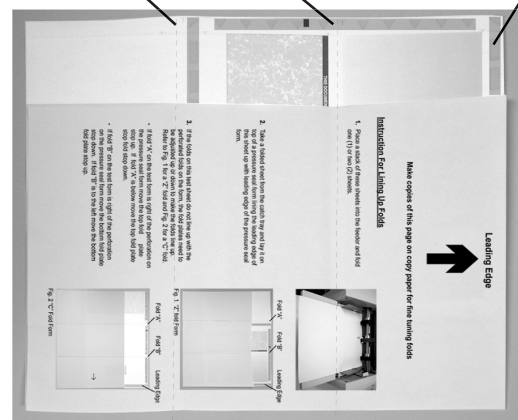

3. If the folds on this test sheet do not line up with the perforated folds on the form, the fold plates need to be adjusted up or down to make the folds line up. Refer to Fig. 1 for a "Z" fold and Fig. 2 for a "C" fold.

- If fold "A" on the test form is right of the perforation on the pressure seal form move the top fold plate stop up. If fold "A" is below move the top fold plate stop fold stop down.
- If fold "B" on the test form is right of the perforation on the pressure seal form move the bottom fold plate stop down. If fold "B" is to the left move the bottom fold plate stop up.

Fold "A" Fold "B" Leading Edge


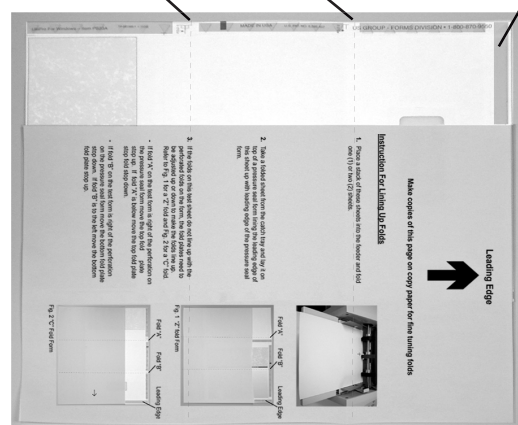


Fig. 2 "C" Fold Form


OPTIONAL CONVEYOR INSTALLATION

To install the 18" conveyor you should follow these steps:

1. Unplug the 2000/2030 from the wall outlet.
2. Remove upper fold table
3. Turn the machine on to the non-operator side and remove the catch tray from machine. Return the machine to its upright position.
4. Plug the power cord into the underside of the conveyor.
5. Install conveyor mounting bolts (figure 5)
6. Attach the conveyor to the 2000/2030.
7. Install the stacker wheel assembly into the holes indicated in figure 6.
8. Adjust the stacker wheels to conveyor decal (figure 6).
9. Plug the conveyor power cord into the power outlet on the 2000/2030.
10. Reinsert the upper fold table.
11. Plug the 2000/2030 into the wall outlet.

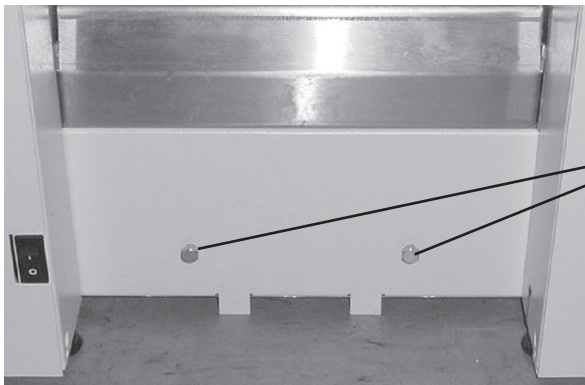

Mounting Bolts

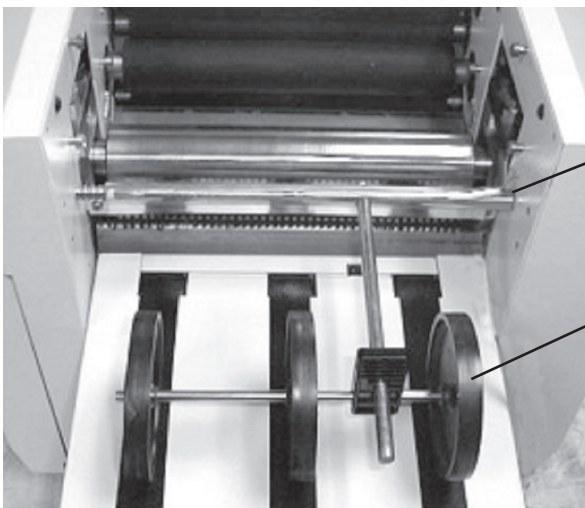

Holes for Stacker Wheel Assembly

Stacker Wheels