

Safety Devices and Other Features

Formax 8000 Series Shredders are equipped with various safety features:

Automatic Reverse Rotation

When too much paper is inserted, the cutter stops operating and automatically rotates in reverse to discharge the jammed paper. An alarm sounds. Reduce the amount of paper and restart the operation.



Door Switch

If the door is open, the shredder will not operate.



Automatic Stop

When the shredded paper fills the wastebasket, the "FULL" light comes on and the cutter stops operation. Open the door, remove the wastebasket and empty paper scraps. Replace the wastebasket, close the door and continue operation.



Automatic Power Shut-Off

- After 30 minutes of non-use, a "beep" will sound and the power is shut off.
- If the shredder operates continuously for more than 30 minutes, the power is automatically shut off.
- To operate the machine continuously for longer than 30 minutes, push the "AUTO" button.

Maintenance

- Disconnect power by pulling power cord plug from wall outlet.
- To clean the exterior, wipe the surface with a soft cloth. If the surface is very dirty, use a neutral detergent, then wipe again with a soft cloth.

CAUTION:

- Never put water directly on the surface of the shredder.
- Never clean the case with benzene or thinner, since it will cause discoloration.
- Do not dismantle the shredder. Contact your Formax Dealer for service.

FORMAX[®]

Paper Shredders

FD 8500CC Cross-Cut

FD 8500SC Strip-Cut



OPERATOR MANUAL
FIRST EDITION

Specifications

FD 8500CC

FD 8500SC

Cutting Style:	Cross Cut	Strip Cut
Shred Size:	5/32" x 1-1/5"	5/32"
Sheet Capacity:	16 to 18	20 to 22
Speed:	31 feet per minute	33 feet per minute
Feed Opening:	16"	16"
Dimensions:	24" W x 20" D x 35" H	24" W x 20" D x 35" H
Bin Capacity:	26 gal.	26 gal.
Weight:	242 lbs.	242 lbs.
Power supply:	110V, 50/60Hz	110V, 50/60Hz
Cutting heads accept credit cards, staples and paper clips.		

Set-up Guidelines

1. Install the shredder on a level surface, away from heat sources and direct sunlight.
2. Insert plug into wall outlet with the appropriate voltage, 110V. If the outlet is shared with another electronic device, the total current should not exceed 30A (at 110V).

Operation


1. Open the door and turn the power switch "ON." Close door.

2. Auto Start/Auto Stop

When the "START A/M" button is pushed, the signal lamp "AUTO" will light. Insert paper to shred. The shredder will start and stop automatically when using this function.

3. Manual Operation

If paper is too small for the shredder's sensors to detect, shred it manually. Push the "START A/M" button once more and the "MANUAL" lamp will light. Insert paper to be shredded. Three minutes after shredding, the cutter automatically stops rotating.

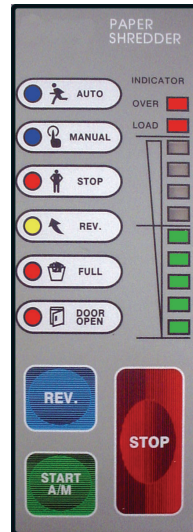

4. Reverse Operation

Push the "REV" button and the signal lamp "REV" will light and cutters will operate in reverse. If too much paper is inserted at one time in standard modes, the shredder will automatically operate in reverse. If this occurs, remove the inserted paper and shred in smaller amounts. NOTE: The maximum amount of paper to be shredded differs according to paper quality, humidity and voltage. If the shredder is to be used continuously, do not insert more than half of the maximum capacity.

5. Full Sensor

If the wastebasket is full, the "FULL" lamp will light and the cutter will stop automatically. Open the door, empty the wastebasket of paper strips/chips, replace the wastebasket, close door, and continue to shred.

Safety Precautions

To avoid personal injury, and damage to the shredder, observe the following safety precautions. Please keep these instructions for future reference.

- Keep hands, long hair, clothing, ties, jewelry and other loose items away from the paper entrance and shred outlet.
- Do not use the shredder for anything other than its intended purpose. Never use it to shred cloth, plastic, cardboard or any hard material that will cause damage to the shredder blades.
- Do not allow children to use the machine.
- Do not operate with a damaged power cord or plug, or when the machine is damaged in any manner.
- Unplug the shredder when it is being moved, or if it is not in use for an extended period of time.
- Do not disconnect the power by pulling only the cord. Hold the plug when disconnecting.
- Keep the shredder away from direct sunlight.
- In case of emergency, push the "STOP" button, or pull the plug out of the wall outlet.
- Do not sit on the shredder or place anything on top of it.
- Never open the fixed switch or cover.